


User Manual

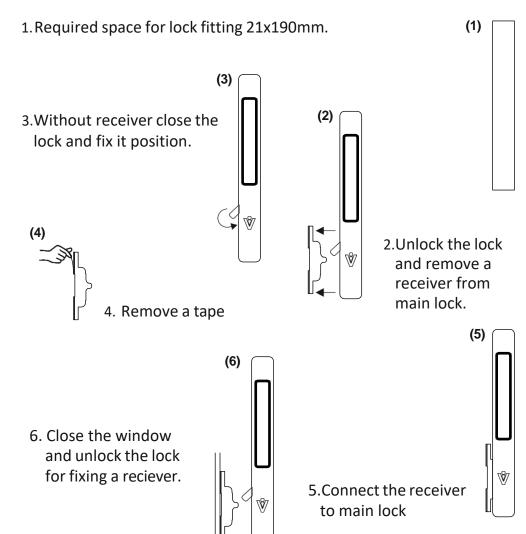

7. Drilling and fix receiver at his position.